

## NM Tegel | Råspont

---

### Mounting kit

**Art no 1356** – NM Hyper Meta

**Art no 1916** – NM Hyper Rail Silver

**Art no 1919** – NM Hyper Joint Rail Silver

**Art no 3121** – NM Hyper Mid/End Clamp Silver (Black)


**Art no 2818** – NM Hyper End Cap Silver (Black)

**Art no 1308** – NM Hex 8 Socket


**Art no 50320500** – NM Wood Screw

**Art no 63191000** – NM Screw



## Metod 1

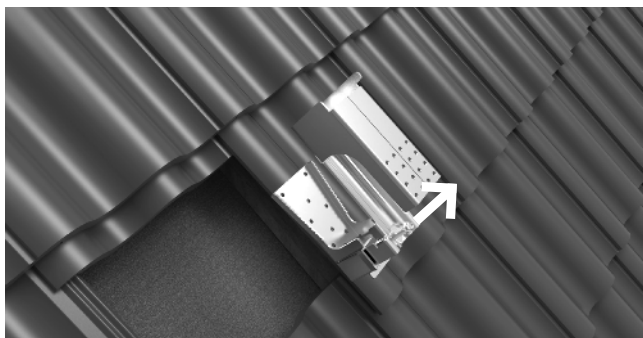


1.

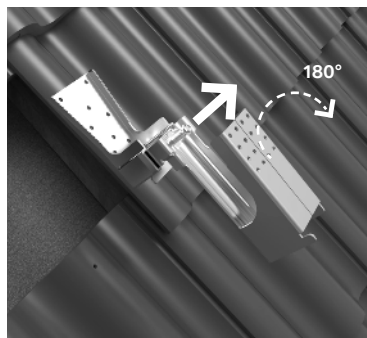


2.

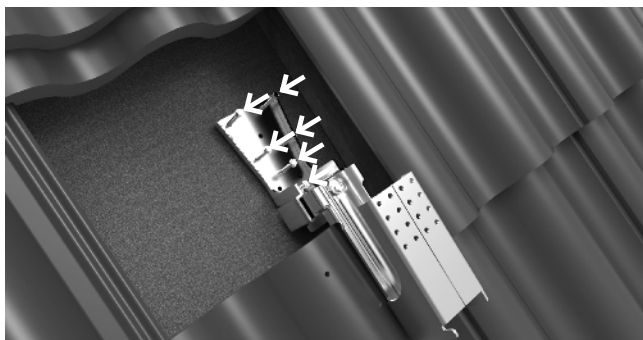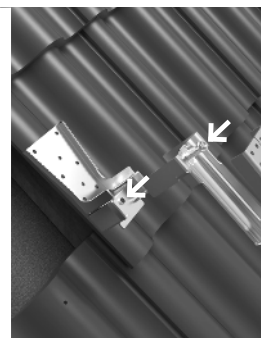


3.

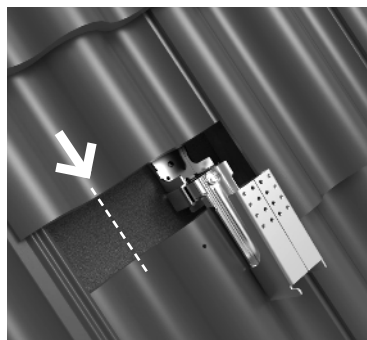


4.

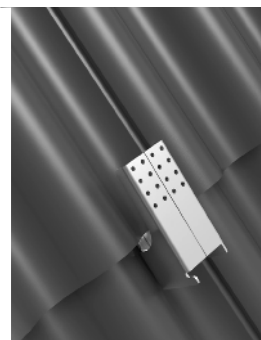


## Metod 2

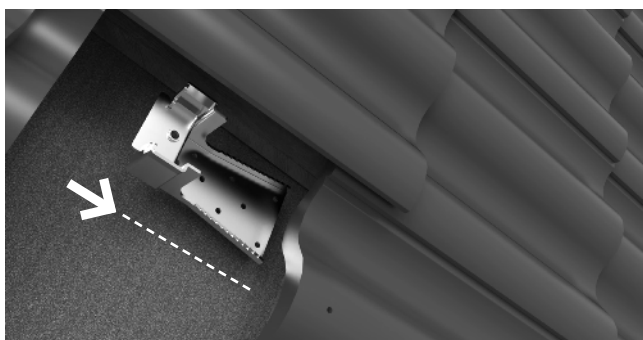


1.

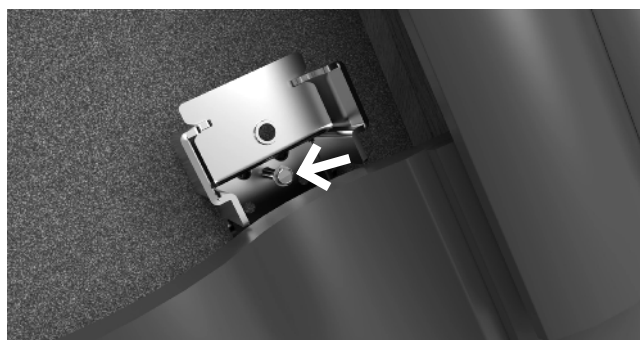


2.

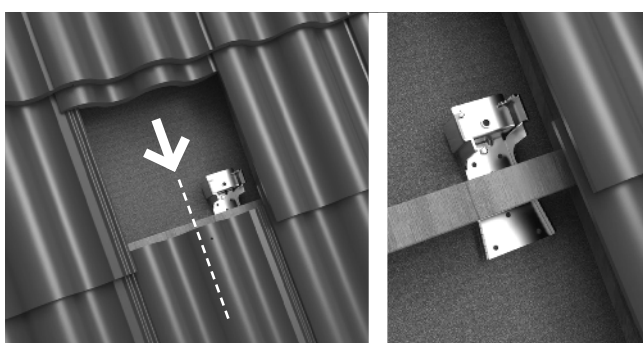

3.

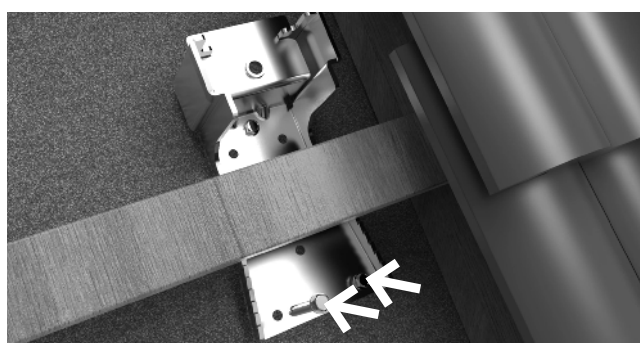


4.

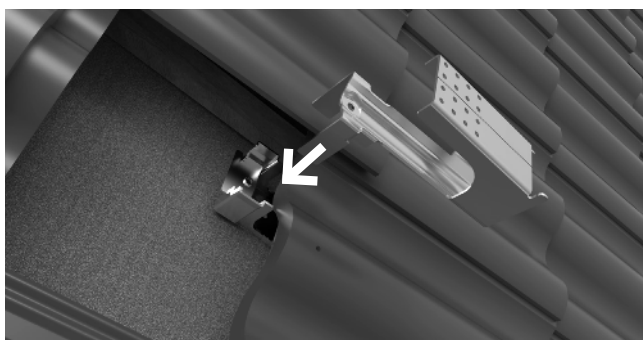

5.




6.

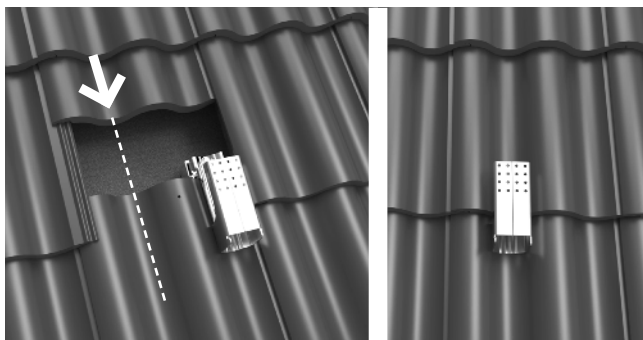


7.



## Efter metod 1 eller 2

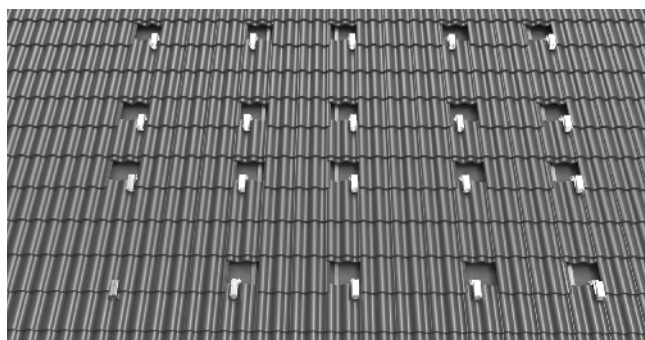


1.

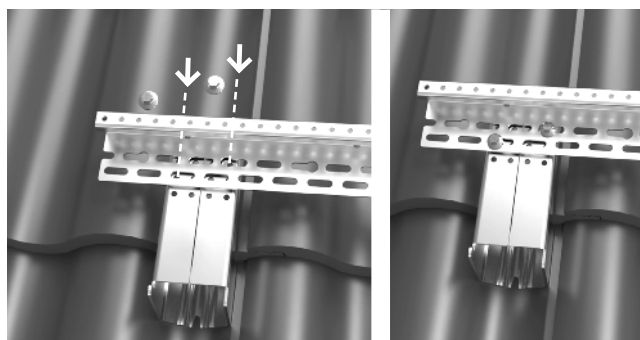

2.




3.

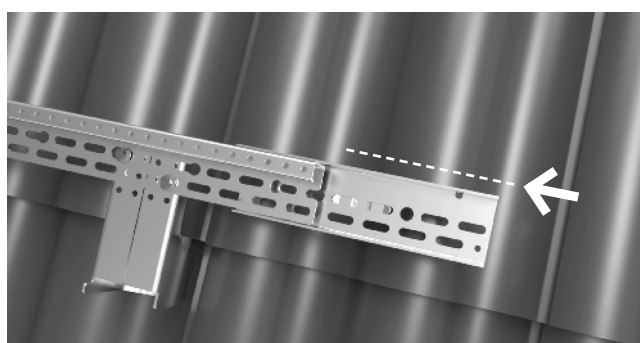


4.




5.

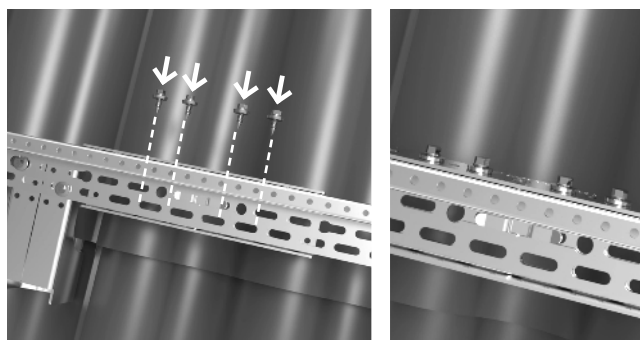

6.

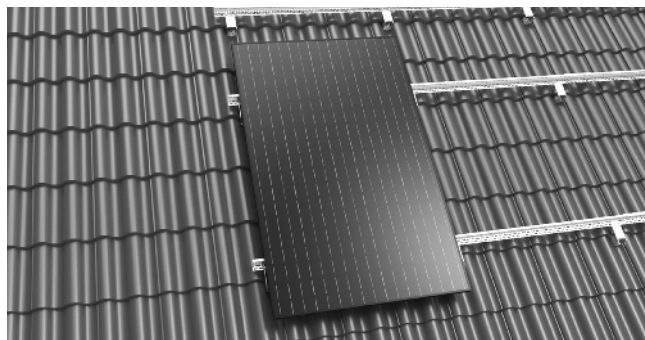


7.

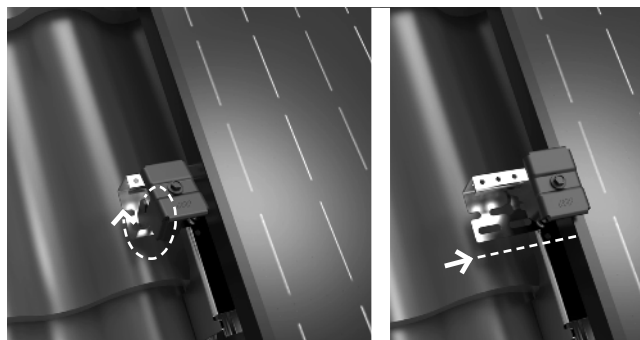


8.


## Efter metod 1 eller 2

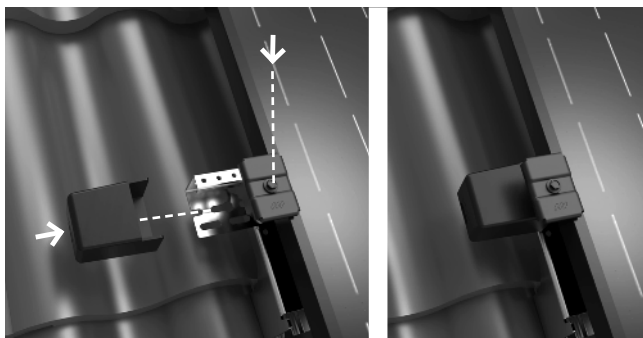

9.

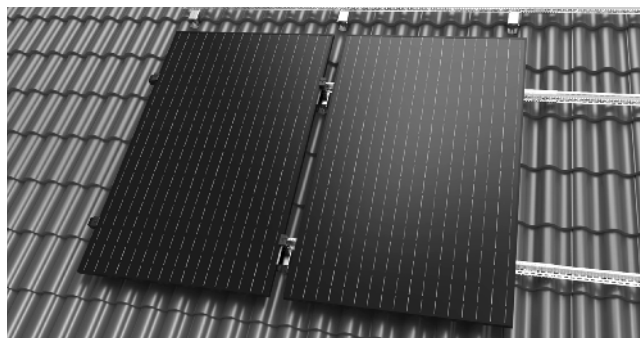

10.

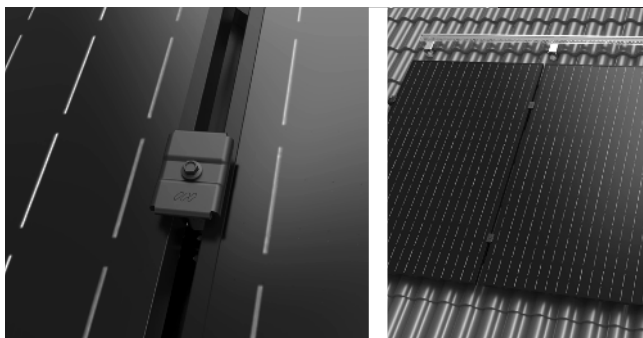

11.